



Daily Urinal Odour Prevention Treatment

with

**TECcare®
CONTROL**

Quick Reference Guide (refer to product SDS before use)



- 1.** Remove fragrance mat, enzyme blocks and debris from the urinal.






- 2.** Pour 28ml of TECcare® **CONTROL** Concentrate down the drain.



- 3.** Fill 300ml refillable sprayer bottle with clean water. Add 4ml **TECcare CONTROL** Concentrate.

Replace sprayer cap and shake bottle to mix.

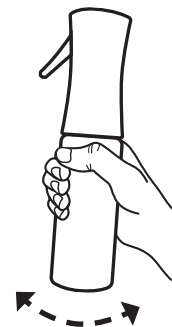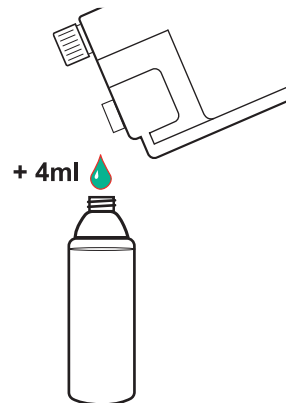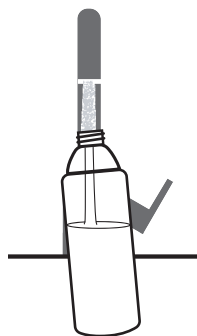

300ml  : 4ml 

- 4.** Spray **TECcare CONTROL**

onto all internal and external surfaces of the urinal including surrounding privacy screens, wall tiles, drain pipework and immediate floor area.

Allow to dry.

