



Uric Crystal Treatment and Prevention


with

TECcare®
Technologies

Quick Reference Guide (refer to product SDS before use)



1.

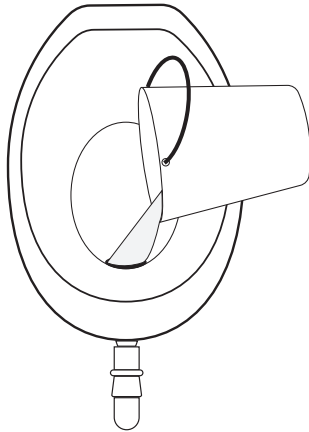

STAGE 1 - REMOVE URIC CRYSTALS

TECcare®
ULTRA

TECcare® ULTRA (1 litre)

- | | | | |
|---------------|---------------------------|-------|--|
| Day 1: | 500ml in 5 litre of water | 1:10 | Per urinal - leave overnight with no flush |
| Day 2: | 250ml in 5 litre of water | 1:20 | Per urinal - leave overnight with no flush |
| Day 3: | 100ml in 5 litre of water | 1:50 | Per urinal - leave overnight with no flush |
| Day 4: | 100ml in 5 litre of water | 1:50 | Per urinal - leave overnight with no flush |
| Day 5: | 50ml in 5 litre of water | 1:100 | Per urinal - leave overnight with no flush |

Note: depends on severity
- repeat as required

2.



STAGE 2 - APPLY FOAM


TECcare®
R-FOAM

TECcare® R-FOAM

Day 6: As per kit

Apply R-FOAM following process within the kit.

3.

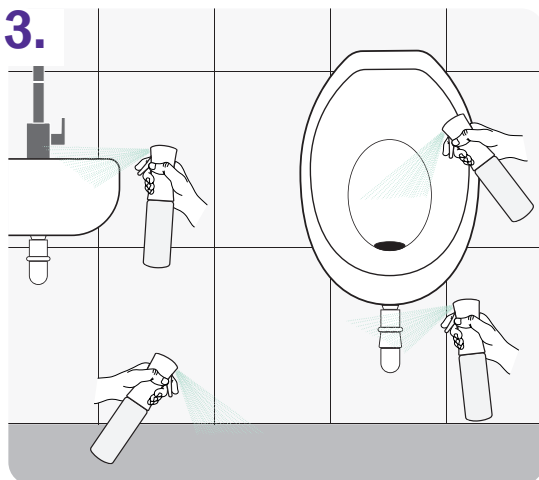

STAGE 3 - NORMAL CLEANING PROCESS

TECcare®
CONTROL

TECcare® CONTROL CONCENTRATE

Day 7: 60ml in 5 litre of water 1:84

Use this now as the cleaning and disinfecting for the washroom including floors, tiles, walls, sinks.