



Toilet Decalcification and Odour Control

with

TECcare®
Technologies


Quick Reference Guide (refer to product SDS before use)



- 1.** Firstly, remove any debris from the toilet.





- 2.** Remove cistern lid. Pour 28 ml **TECcare® ULTRA Concentrate** directly into the cistern and replace lid. Leave overnight before flushing.

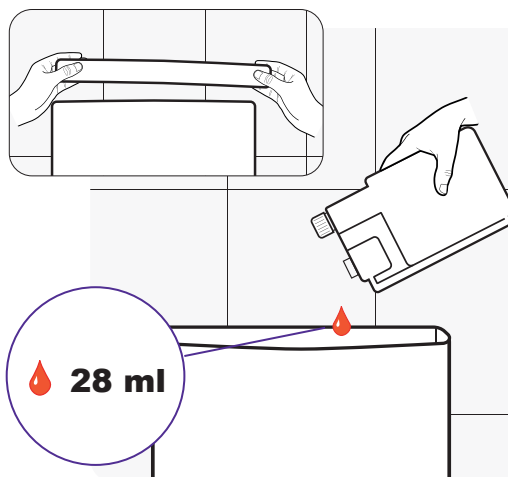

- 3.** Fill 300ml refillable sprayer bottle with clean water. Add 4ml **TECcare® CONTROL Concentrate**.

Replace sprayer cap and shake bottle to mix.

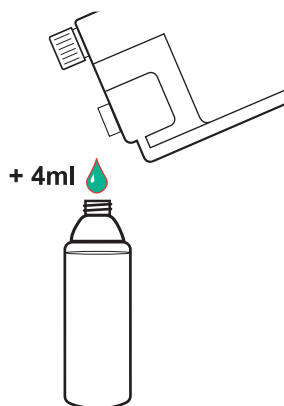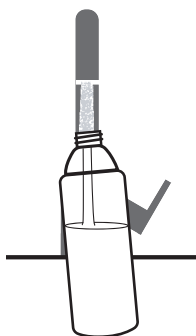

300ml : 4ml

- 3.** Spray into toilet bowl and surrounding surfaces.



- 4.** Allow to dry. The toilet is ready to use.

